



FOX40®

PROFESSIONAL STOPWATCH

JG028

INTRODUCTION

Congratulations on your new Fox 40 stopwatch! This stopwatch is a user-friendly tool to keep track of your time in multiple ways in various activities. To develop basic understandings and get the most out of your purchase, be sure to carefully read this manual and keep it on hand for future reference.

FEATURES:

- Time-of-Day and Calendar
- 12/24 hour time option, minute, second, month, date and day
- Stopwatch: 1/100-second precision for first 30 minutes, 1 second up to 24 hours
- Daily alarm
- Hourly chime

MAIN FUNCTION BUTTONS

MAIN FUNCTION BUTTONS

A—Split/Reset Button

Toggle between normal time and alarm time

B—Mode Button

Switch between normal time mode, stopwatch mode and alarm time mode.

C—Start/Stop Button

Toggle between normal time and month/date display.



DISPLAY SYMBOL

NORMAL TIME DISPLAY

1. Day of the Week
2. Hour
3. Minute
4. Second



MONTH/DATE DISPLAY

1. Month
2. Date



STOPWATCH MODE

STOPWATCH MODE

- Press B to activate this mode.
- Press A to reset the stopwatch to "0:00" before using the stopwatch.

 
1. Accumulate elapsed time measurement: C,C,C,C,A



2. Split time measurement: C,A,A,C,A



3. Measure between two competitors: C,A,C,A,A




Press B to return normal time mode

TIME & CALENDAR SETTING

TIME/CALENDAR SETTING

1. Press B three times to activate this mode.
2. Press A to select the setting items.
The sequence will be: second > minute > hour > date > month > day
3. Press C to increase the setting value and change 12/24-hour format when setting the hour.
4. Press B to return to the normal mode.

Note: Press C to add one minute when the second is more than or equal to 30 and reset it to 00 when the value is less than 30.

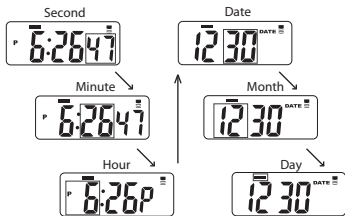

ALARM & HOURLY CHIME SETTING

ALARM SETTING

1. Press B twice to activate this mode.
2. Press C to advance the hour value.
3. Press A to select the minute and Press C to change the minute value.
4. Press B to return to the normal mode.

Note 1: To turn the alarm ON/OFF, Press A and C at the same time.

Note 2: When the alarm is on, (1) it will last one minute without any button pressing then not sound again until the next day. (2) Press C to activate the snooze function, the alarm will start again after 5 minutes. It will sound up to one minute then not sound again until the next day.
(3) Press A to stop the alarm.

HOURLY CHIME SETTING

To set the hourly chime ON/OFF, please do the following:

1. Press A, alarm time display, then hold B simultaneously.



2. Press B until all days of the week appear/disappear.

BATTERY REPLACEMENT

BATTERY REPLACEMENT

WE STRONGLY RECOMMEND TAKING YOUR STOPWATCH TO A LOCAL JEWELER TO HAVE BATTERY REPLACED TO AVOID POSSIBILITY OF PERMANENTLY DAMAGING THE STOPWATCH.

When the LCD becomes dim, replace with a new type LR44, A76 or AG13 1.5V battery.

Warning:

- Keep batteries away from children. If swallowed, contact a doctor or emergency personnel immediately.
- Batteries contain chemical substances. They should be disposed of properly according to local regulations.

CARE & MAINTENANCE

CARE AND MAINTENANCE

- Never attempt to disassemble or service your unit it will void the warranty.
- Protect the unit from extreme heat, shocks, magnetic fields, electrical noise and exposure to direct sunlight long time.
- Unit can be wiped clean with a lightly moistened cloth. Apply mild soap to the area if there are stubborn stains or marks.
- Do not expose the unit to strong chemicals such as gasoline, clean solvents, acetone, alcohol, insect repellents, as they may damage the unit's seal, case and finish.
- Do not swing the stopwatch.
- Do not drop or step on the stopwatch.
- Do not wash the stopwatch or touch it with wet hands.
- Store the unit in a dry place when you are not using it.
- Keep the stopwatch out of reach of young children.

